407 South Main St. Freeport, NY 11520 www.primelite-mfg.com



Phone (516) 868-4411 Fax (516) 868-4609 sales@primelite-mfg.com

Bullet Wall Fixture Installation Instructions

General Instructions

You don't need special tools to install this fixture. Be sure to follow the steps in order. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag-type fixture be installed on a ceiling that contains radiant heating.


NOTE: Proper wiring is essential for the safe operation of this fixture. Read the instructions carefully. If you are unclear how to proceed, consult a qualified electrician.

WARNING!

Be sure the electricity to the wire you are working on is shut off! Turn off the Circuit Breaker or REMOVE the Fuse!

Installation

- 1. Secure the mounting bar to the outlet box with screws from the outlet box (not supplied).
- 2. Place the black wire from the fixture evenly against the black wire from the outlet box. Twist together the bare part of the metal.
- 3. Fit the wire connector (not supplied) over twisted wire and screw the connector clockwise until you feel that the connector is secure.
- 4. Try to gently pull the connector off the wires. If you can pull the connector off, carefully redo steps 2 and 3 above and check again for a firm connection.
- 5. Connect the white wire from the fixture to the white wire from the outlet in the same manner.
- 6. Grounding Instructions: The Mounting bar is supplied with a green ground screw. Wrap the ground wire from the power supply (bare metal or green insulated wire) and the fixture around the green grounding screw. Fasten the screw firmly to the mounting bar. NEVER CONNECT THE GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES!
- 7. Secure the canopy to the mounting bar with the metal finial cap.
- 8. Install the lamp in the socket.

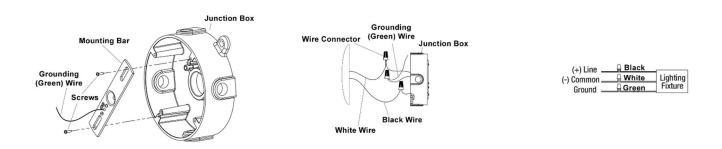

Mounting Diagram Wiring Diagram Wire Color Diagram